


Typical Pavement Repair Patch

Typical Utility Cut Patch

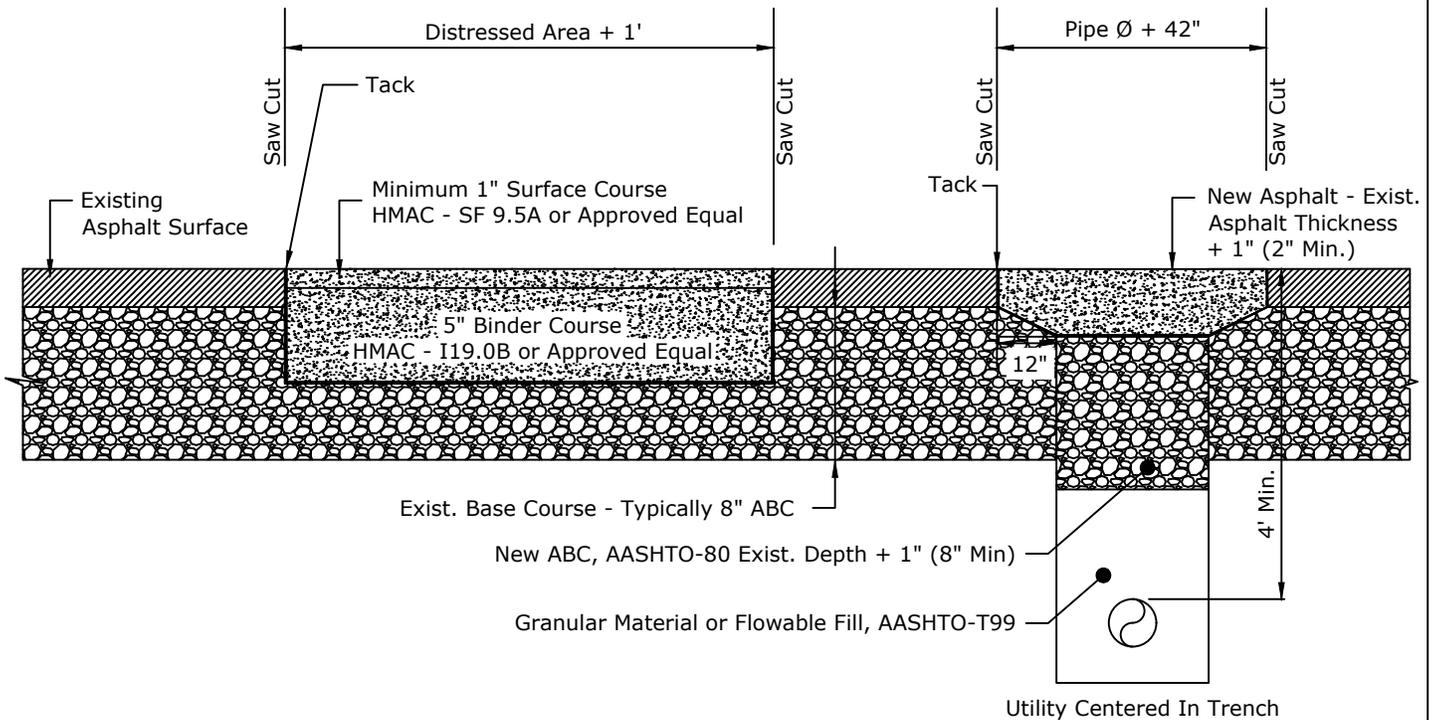

Notes:

1. The pavement repair area shall be defined by a straight edge, preferably a machined saw cut.
2. The asphalt pavement material shall be rolled and compacted to achieve a smooth level patch that matches the existing grade.



Asphalt Pavement Patch for Non-NCDOT Applications

City of Sanford Engineering Dept - P.O. Box 3729 - Sanford, NC 27331

Dwg. No. SD-R-003

Date: 10/21/19

Scale: Not To Scale

Drawn By: Staff